



Waler Attachment

Standard 2" x 4" or 2" x 6" lumber can be used as walers for the Uni-Form. With specially designed hardware, the waler are quickly fastened to bring form work into alignment. Only one row of walers is required per tier of forms for handset applications.

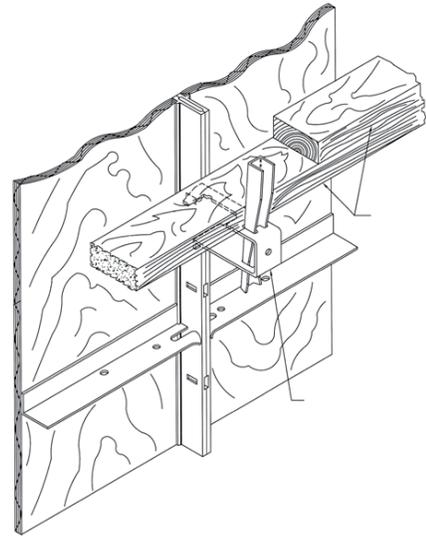

Strongback Attachment

Additional tiers of forms will require strongbacks for vertical alignment of the form work. Strongbacks are required only on one side of the forms for handset hardware to make stacking easy.

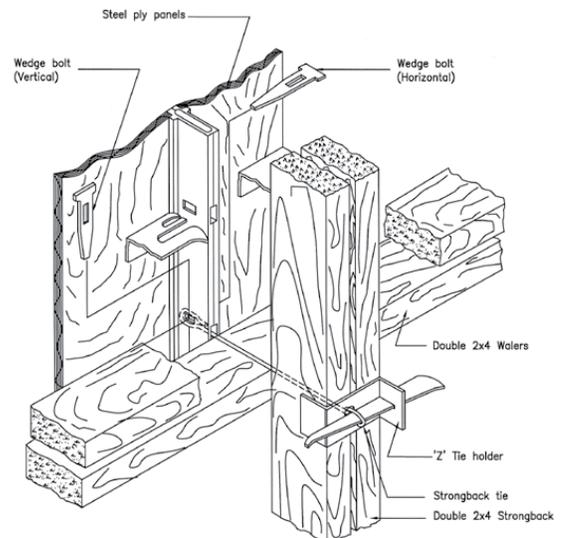

Job Built Filler

Filling Angles provide a means to construct a custom size filler of 3/4" plywood that can be connected to side rails of adjoining forms.

